

MoPAR**MoPAR**

INSTRUCTIONS FOR INSTALLING


MOPAR HAND BRAKE SIGNAL

Part No. 1886 822

1959 Plymouth, Dodge and De Soto

- * PLYMOUTH AND DE SOTO: CONNECT EYELET TERMINAL TO IGNITION SWITCH POST MARKED "IGN."
- * DODGE: REPLACE EYELET TERMINAL WITH FEMALE TERMINAL PROVIDED IN PACKAGE AND CONNECT TO ACCESSORIES TERMINAL BLOCK

ON DODGE MEASURE FROM
THIS CREASE

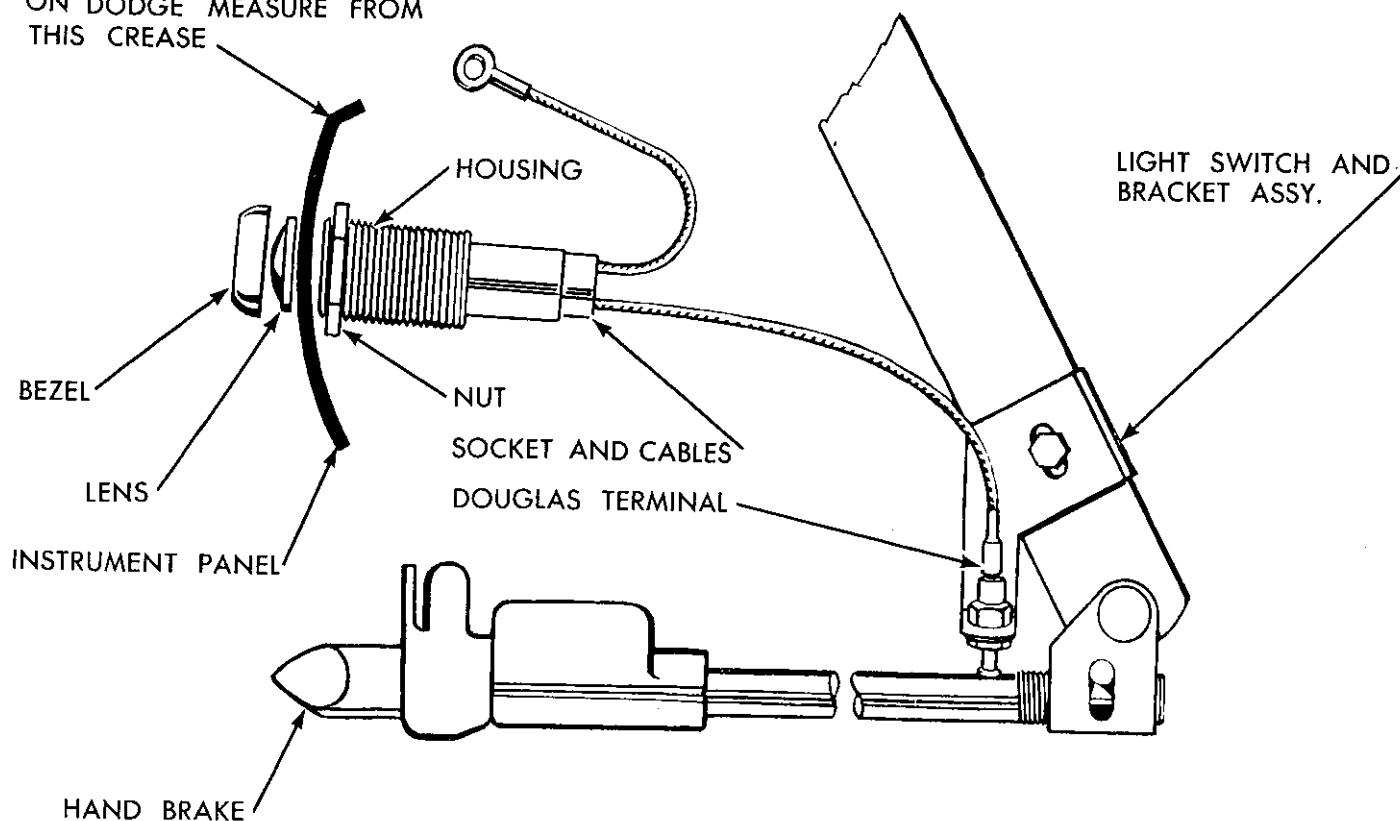

LAMP HOUSING AND DRILLING INSTRUCTIONS

- * PLYMOUTH: DRILL 29/32" HOLE 2" TO THE RIGHT OF CENTER LINE OF OF HEAD LAMP SWITCH AND 2-1/2" FROM BOTTOM OF INSTRUMENT PANEL FLANGE
- * DODGE: DRILL 29/32" HOLE 2-1/8" TO THE LEFT OF THE CENTER LINE OF HAND BRAKE AND 2" DOWN ON THE INSTRUMENT PANEL SURFACE FROM THE CREASE AS SHOWN ON DRAWING.
- * DE SOTO: DRILL 29/32" HOLE 3-3/8" FROM BACK OF LOWER FLANGE OF INSTRUMENT PANEL 1" TO THE LEFT OF THE LEFT END OF THE (HAND BRAKE) MOUNTING BRACKET

CHRYSLER CORPORATION • SERVICE PARTS AND ACCESSORIES SUPPLY DIVISION

DETROIT 31, MICHIGAN