Instructions for Installing

MOPAR REAR FENDER SKIRTS
Part No. 1881864
On PLYMOUTH MP-1 and MP-2
(Except Convertible and Surburban)

1-Locate brackets from wire hook positions.
2-Using bracket holes to locate, drill 7/32 dia. holes in fender flange.
3-Fasten securely with nuts and bolts furnished.

NOTE: INSTALL AND FIT BEFORE PAINTING

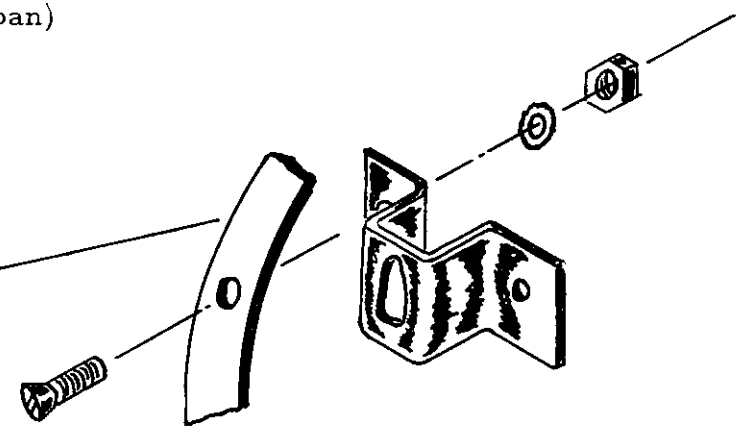

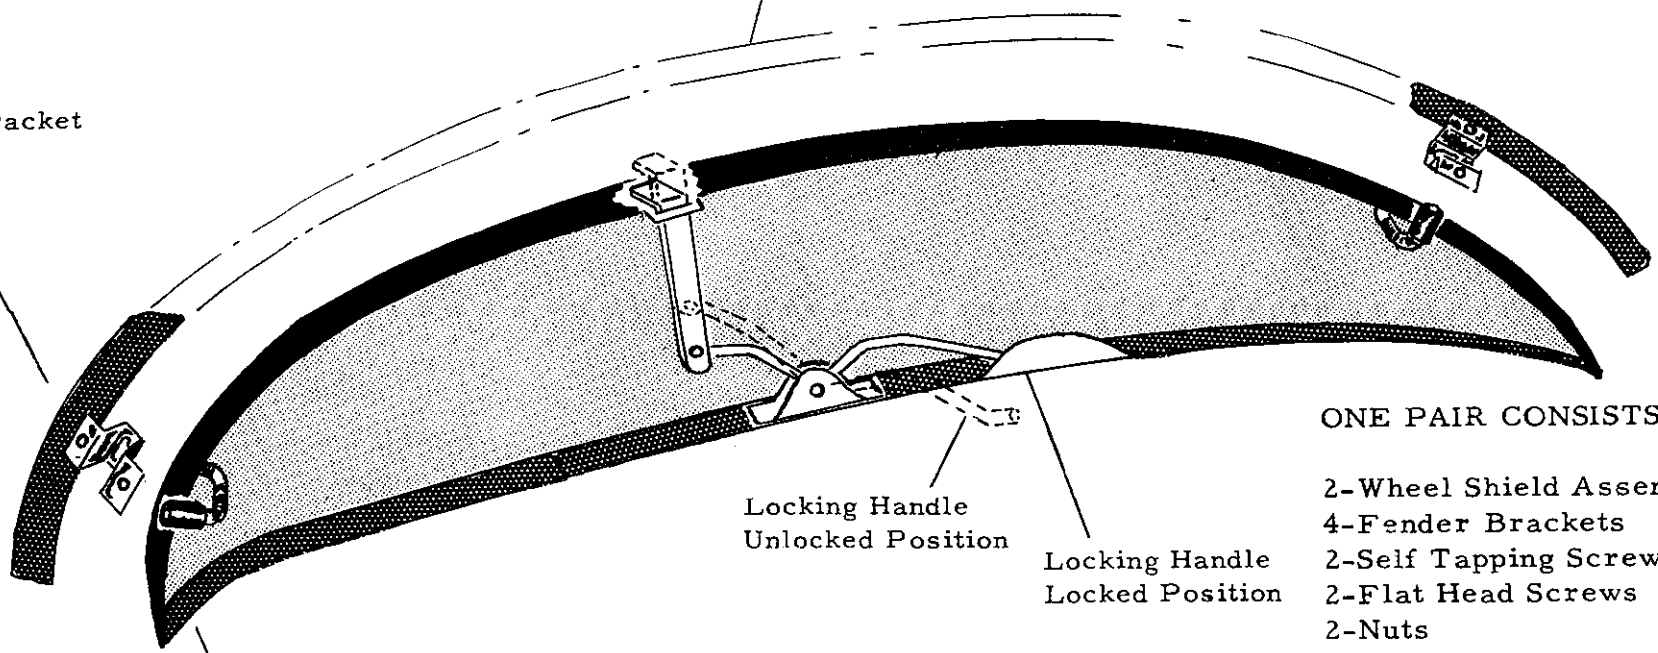

ONE PAIR CONSISTS OF-

2-Wheel Shield Assemblies
4-Fender Brackets
2-Self Tapping Screws
2-Flat Head Screws
2-Nuts
2-Lockwashers
4-Anti-Rattlers

CHRYSLER CORPORATION
SERVICE PARTS AND ACCESSORIES SUPPLY DIVISION
P.O. Box 1718 · Detroit 31, Michigan

D-16959 10-58

Printed in U.S.A.